 


# PXN-X9

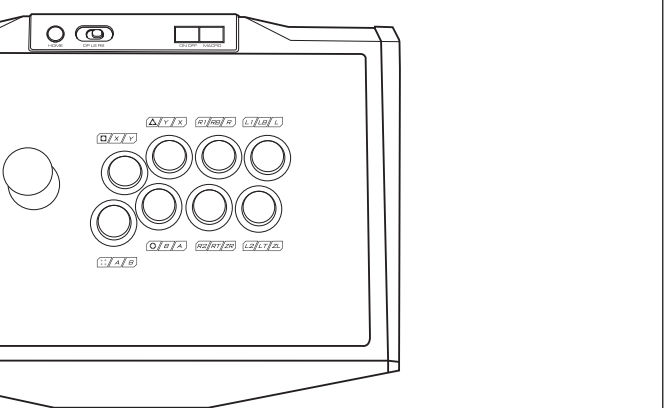

X9



## User Manual

 
### ARCADE FIGHT STICK

- 14 -


Thank you for choosing PXN's product and supporting our brand. Please read the manual carefully before using.

### ● Product Overview

Use the "D-pad" and "gamepad" button to toggle between modes

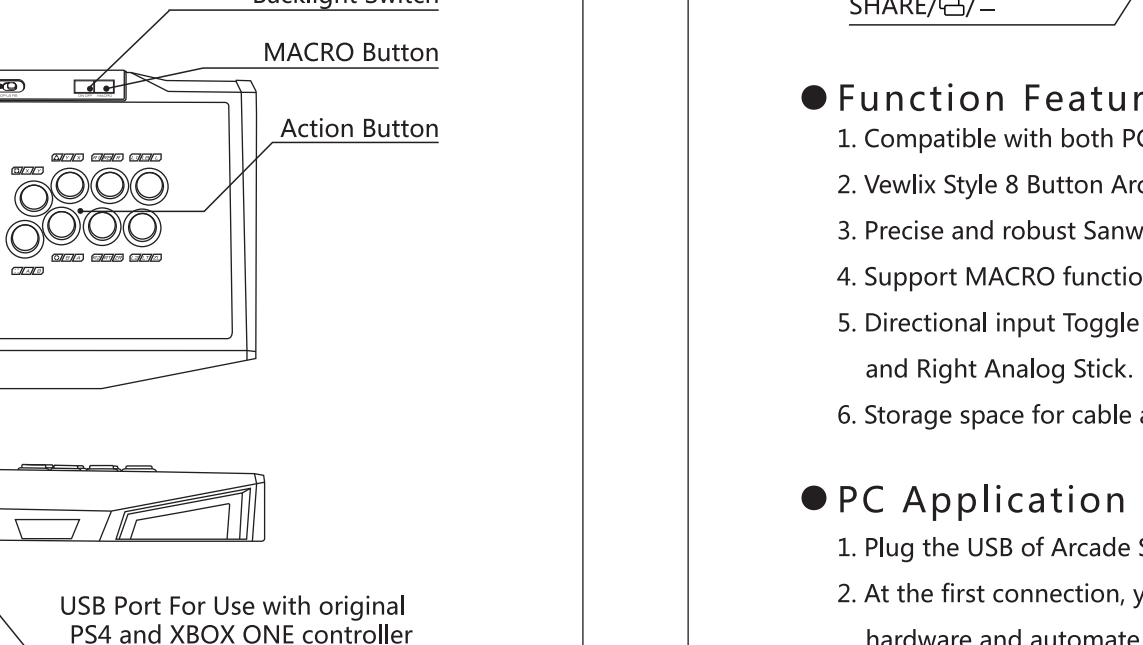

- 15 -

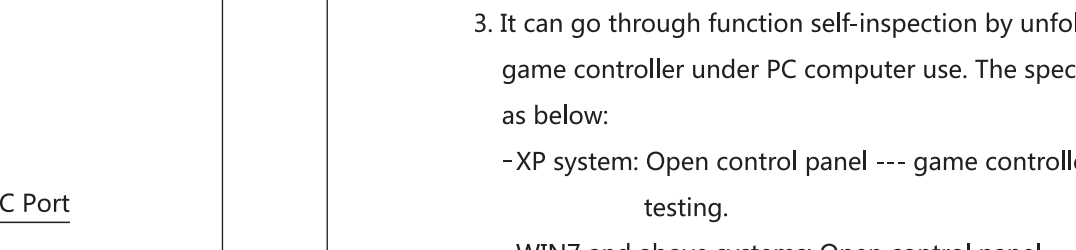 

### ● Function Features

1. Compatible with both PC/Android/PS3/PS4/XBOX ONE/SWITCH.
2. Viewlix Style 8 Button Arcade Layout ideal for all fighting games.
3. Precise and robust Sanwa Denshi parts, Stick and Buttons.
4. Support MACRO function.
5. Directional input Toggle Switch between D-pad, Left Analog Stick and Right Analog Stick.
6. Storage space for cable and spare replaceable buttons and tools.

### ● PC Application

1. Plug the USB of Arcade Stick into the computer USB interface.
2. At the first connection, you will be prompted to discover new hardware and automate the driver installation.

- 16 -

### 3.

 
It can go through function self-inspection by unfolding computer game controller under PC computer use. The specific methods are as below:

-XP system: Open control panel --- game controller, click attribute testing.

-WIN7 and above systems: Open control panel --- device and printer --- a right mouse click controller icon --- game controller set, click attribute testing.

### 4.

Open the test interface as below, you can test the axes and buttons.



- 17 -

### ● Android Device Application

-Connect with Android cellphone

- ① Plug the USB cable into Arcade Stick port.
- ② Connect with OTG adapter (Micro otg or TYPE-C).
- ③ And then download the fighting games or emulator game.

PS : Some of cellphones need to turn on the OTG function switch in the phone setting.

-Connect with Android TV box or TV

- ① Plug the USB cable into using device.
- ② And then download the fighting games or emulator game.

 
### ● PS3 Application

- ① Plug the USB of Joystick into the PS3 USB interface, power on the console.
- ② After connection on the PS3 console, the console will automatically assign a channel to the Arcade Stick. You can start to play game or set function of console.

- 18 -

### ● PS4 Connection

- ① Plug the original PS4 controller into the USB port of Arcade stick (Power Off PS4 console& controller).
- ② Plug the USB of Arcade stick into PS4 USB interface. And Power ON PS4 console.
- ③ When the LED on controller will turn on, press the 'HOME' button on the Arcade Stick.

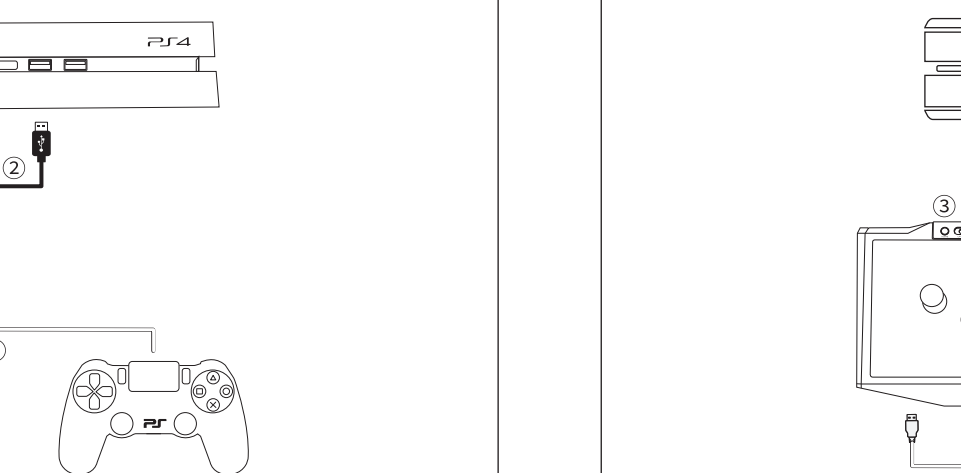


( PS4 Connection Diagram )

- 19 -

### ● XBOX ONE Connection

 - ① Use USB cable to connect original XBOX ONE controller with Arcade Stick' s USB port (Power OFF XBOX One& controller).
- ② Plug the USB of Arcade stick into XBOX ONE USB interface, Power ON XBOX ONE console.
- ③ When the LED on controller will turn on, press the 'HOME' button on the Arcade Stick.

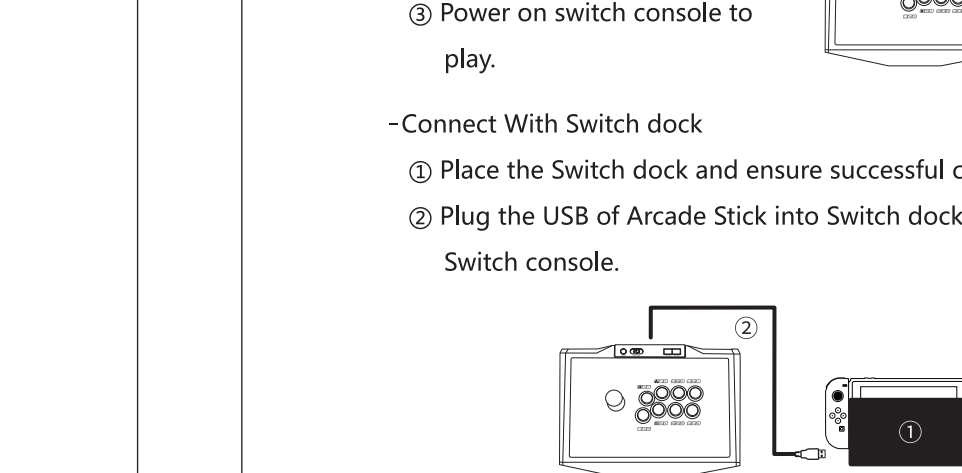

( XBOX ONE Connection Diagram )

- 20 -


### ● Switch Connection

 -Connect With Switch Console

- ① Connect the TYPE-C OTG with the USB of Arcade Stick.
- ② Connect the USB main cable of the Arcade Stick to Switch Console.
- ③ Power on switch console to play.

-Connect With Switch dock

- ① Place the Switch dock and ensure successful connection.
- ② Plug the USB of Arcade Stick into Switch dock and power on Switch console.

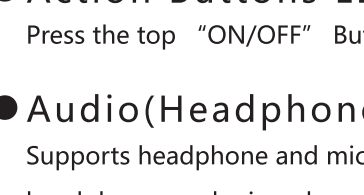

PS : Press "+" and "-" at the same time to take a screenshot.

- 21 -


### ● TheToggle Switch between "D-pad" and "3D" Stick.

 Directional input Toggle Switch between D-pad, Left Stick and Right Stick.

D-pad: Set the switch to 'DP' and the joystick function as the 'D-pad' of the controller.

Left Stick: Set the switch to 'LS' and the joystick function as the 'Left Stick' of the controller.

Right Stick : Set the switch to 'RS' and the joystick function as the 'Right Stick' of the controller.

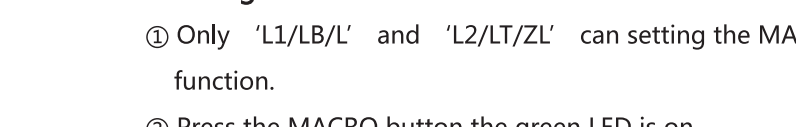

### ● Action Buttons LED Light

Press the top "ON/OFF" Button to switch backlight on/off.

### ● Audio(Headphone and microphone)

Supports headphone and microphone, voice communication with headphones and microphone @XBOX ONE& PS4.

- 22 -

### ● MACRO Function

-To setting MACRO Function

 
- ① Only 'L1/LB/L' and 'L2/LT/ZL' can setting the MACRO function.
- ② Press the MACRO button the green LED is on.
- ③ Press the macro button (L1/LB/L,L2/LT/ZL) to setup the macro function, the green LED flashes.

Press each function button to combine them into the desired function (up to 15 times can be set for one MACRO, the simultaneous pressing of multiple buttons is counted once, and it automatically saves and exits the setting after 15 times ).

-Macro buttons include

- 23 -

### ● To replace action buttons

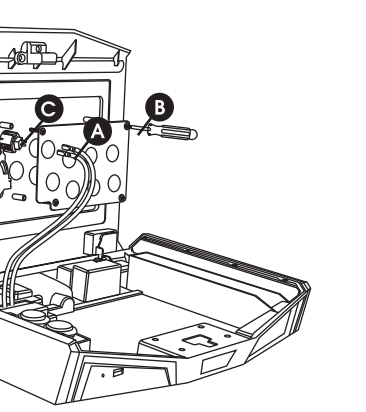

### ● Attentions

1. Don't let water or other liquid entering inside of the gamepad to make any damages.
2. Don't store in places of high humidity, temperature, heavy oil or smoke.
3. Don't drop the gamepad into fire or explosion danger may be caused by built-in battery.
4. Children should be under the custody of adults to use this product.

- 25 -

### ● Button Layout

| TYPE           | PS3®     | PS4®     | Xbox One™ | PC /Android | SWITCH™  |
|----------------|----------|----------|-----------|-------------|----------|
| Action Buttons | △        | △        | A         | A           | B        |
|                | ○        | ○        | B         | B           | A        |
|                | □        | □        | X         | X           | Y        |
|                | △        | △        | Y         | Y           | X        |
|                | R1       | R1       | LB        | LB          | L        |
|                | L2       | L2       | LT        | LT          | ZL       |
| Joystick       | UP/Y+    | UP/Y+    | UP/Y+     | UP/Y+       | UP/Y+    |
|                | DOWN/Y-  | DOWN/Y-  | DOWN/Y-   | DOWN/Y-     | DOWN/Y-  |
|                | LEFT/X+  | LEFT/X+  | LEFT/X+   | LEFT/X+     | LEFT/X+  |
|                | RIGHT/X- | RIGHT/X- | RIGHT/X-  | RIGHT/X-    | RIGHT/X- |
| Functions      | SELECT   | SHARE    | View      | BACK        | -        |
|                | START    | OPTIONS  | Menu      | START       | +        |
|                | PS       | PS       | X-Guide   | X-Guide     | HOME     |
|                |          |          |           |             |          |

- 26 -

### ●Product Specification

|                         |                     |
|-------------------------|---------------------|
| Model                   | PXN-X9              |
| Connection              | USB Cable           |
| Input                   | 5V ~ 80mA           |
| Packing Size            | Appr. 460*335*160mm |
| Product Size            | Appr. 403*296*123mm |
| Net Weight              | Appr. 3320g         |
| Application Temperature | 0-40℃               |
| Application Humidity    | 20~80%              |

- 27 -