


English

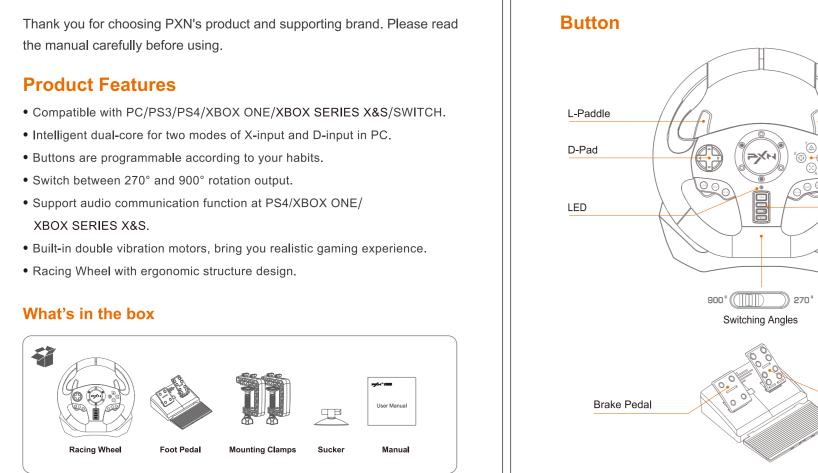


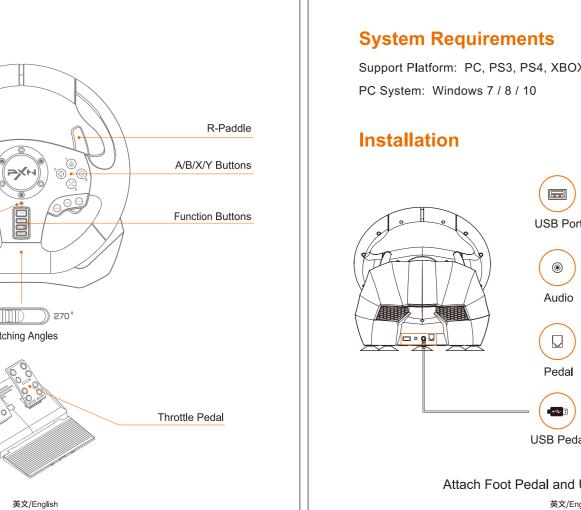

英文/English

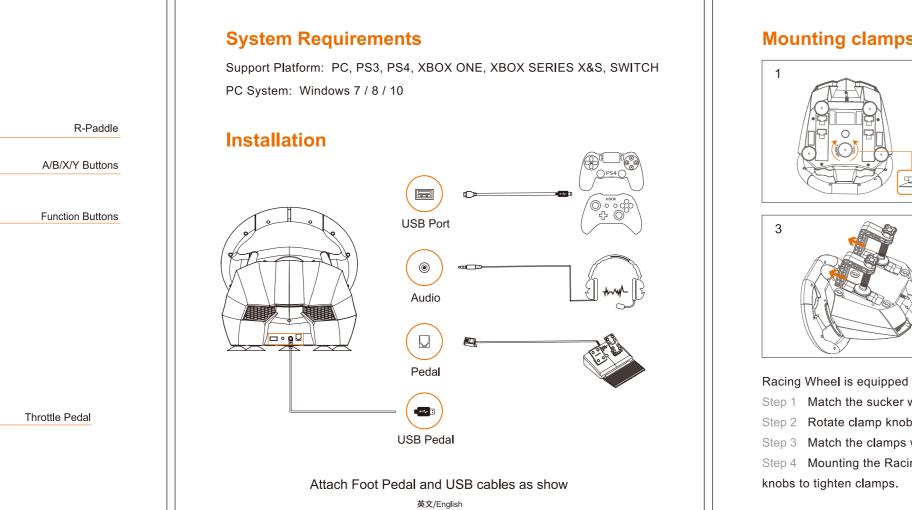



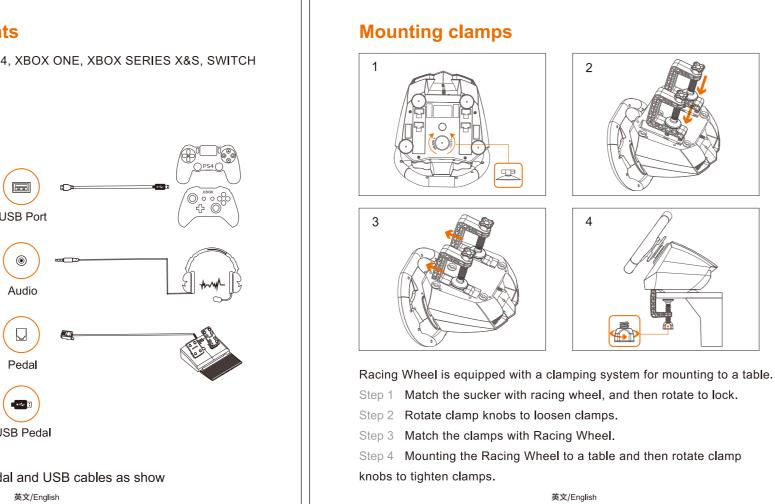

red LED keeps lighting on. X-input mode Racer" and so on. D-input mode


Step 1 Connect the Racing Wheel to the USB port of the PS3. ep 1 Switch MODE between X-input and D-input. Press "MODE" 3s X-INPUT ← D-INPUT Step 2 When the Red LED light keeps on. it can start to play game or set functionson PS3. Step 2 Racing Wheel is default to X-input mode when connecting computer, and X-input MODE is compatible with Games for windows, Plug and play. Recommended Games: "Need for Speed 13" above version, "Dirty2/3/4", "Ridge D-input MODE is compatible with early PC racing games. Recommended Games: "Need for Speed 1-12", "Euro Truck Simulator" and PC Diagram of PS3 Connection


英文/English


Diagram of PC Connection

英文/English

Using for PS4 Console Step 1 Power off the original controller of PS4. Step 2 Connect the Racing Wheel with PS4 controller by Micro USB cable. Step 3 Plug the USB of Racing Wheel into PS4 USB interface. Step 4 Press the button of "MODE". After that the Racing Wheel can start play game and setting. Diagram of PS4 Connection 英文/English

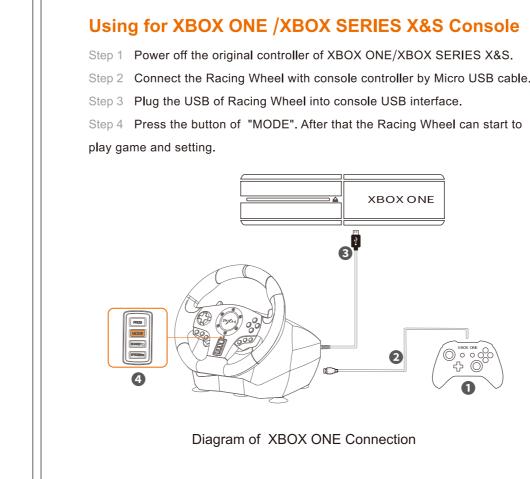

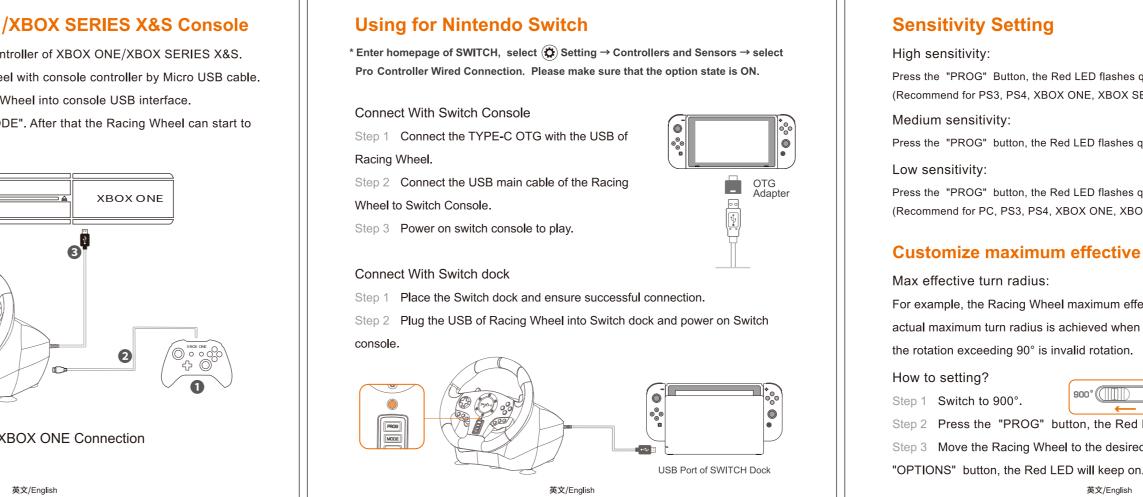

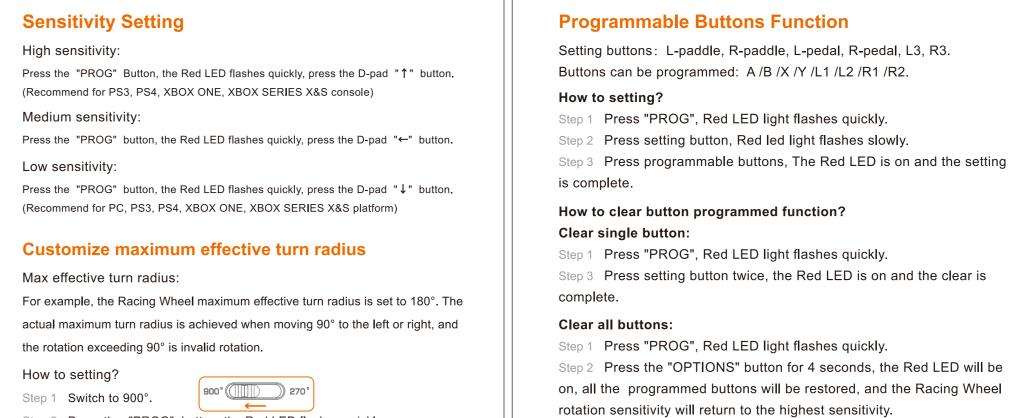

seconds. Don't store in places of high humidity, temperature, heavy oil or smoke. Don't drop the Racing wheel into fire or explosion danger may be caused by built-in battery. Children should be under the custody of adults to use this product. The Racing Wheel supports to connect with headset and microphone, allowing player to connect headset for voice communication on PS4/XBOX ONE/ XBOX SERIES X&S console. Product Model PXN-V900 Appro. 280 * 340 * 285 mm Diagram of Headphone Connection 英文/English

the "PROG" button again to exit programming. The previous data does

- Avoid fierce vibration. Don't take apart, revise and mend by yourself.
- ② Press "PROG" button, the Red LED flashes quickly. If there is no • Don't let water or other liquid entering inside of the Racing wheel to make any action at this time, the programming will automatically exit after 10

not change.

- Step 3 Press programmable buttons, The Red LED is on and the setting

英文/English

- Step 2 Press the "PROG" button, the Red LED flashes quickly.

tep 3 Move the Racing Wheel to the desired angle (more than 60°), press the

- ① Press "PROG" button, the Red LED flashes quickly, and then press

- damages.

Appro. 410 * 360 * 307 mm