V3 PRO

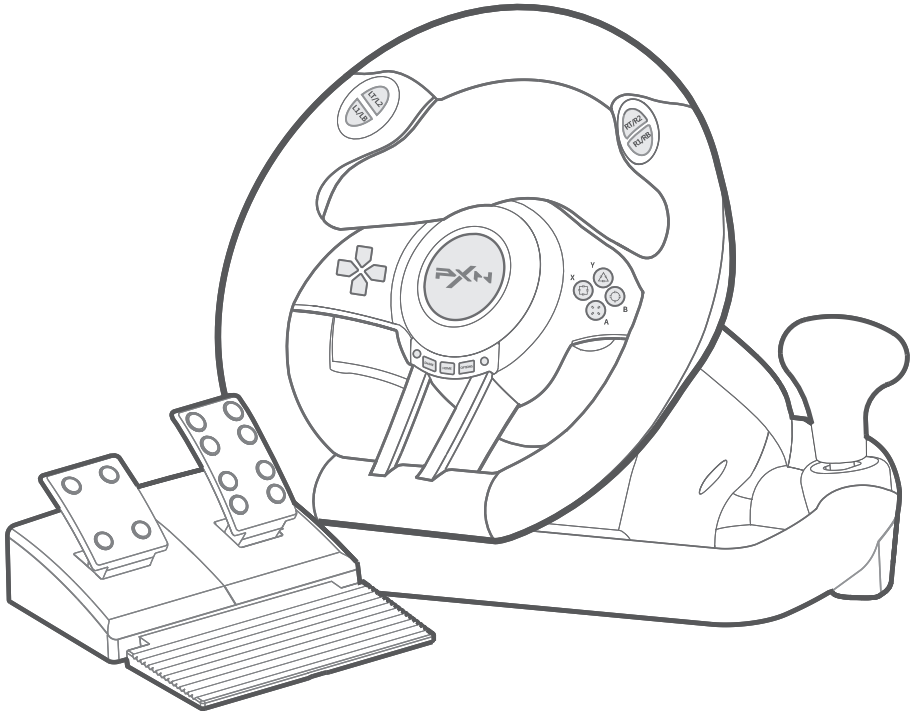

User Manual

System Requirements

Compatible Platforms	PC, PS3, PS4, XBOX ONE,
System Requirement on PC	windows 7 / 8 / 10

Product Overview

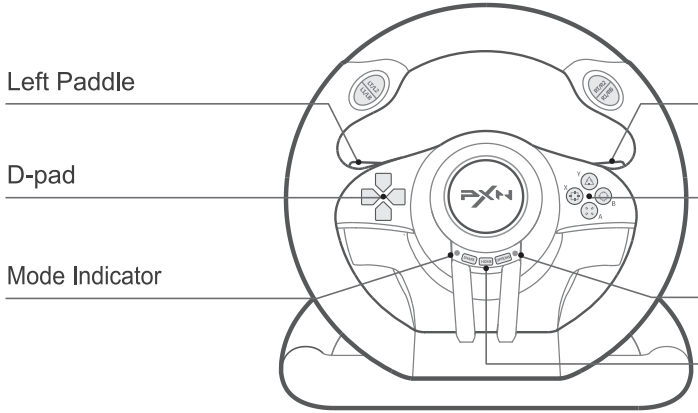



XBOX SERIES X&S, SWITCH

Right Paddle

（A B X Y） Button

Programming Indicator

Function Buttons

Accelerator

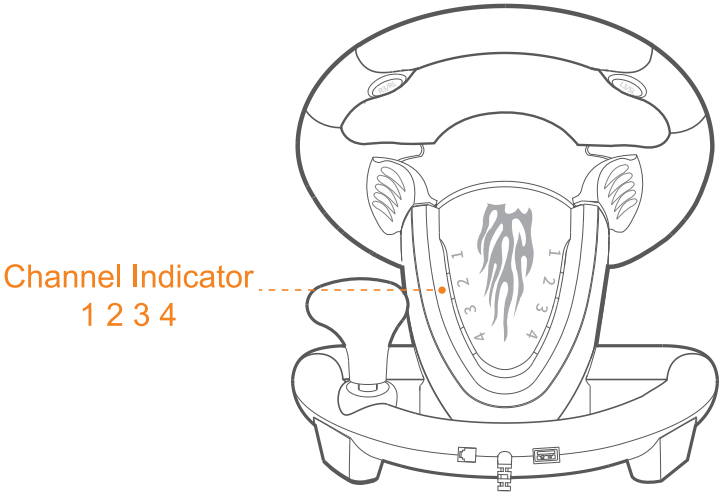

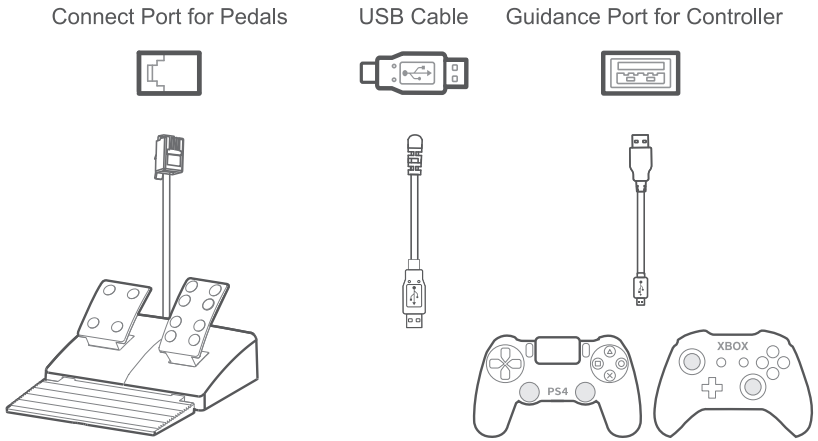

Connect Pedals and USB Cable According to Diagram

Clamp Installation

The steering wheel is equipped with a screw staff and

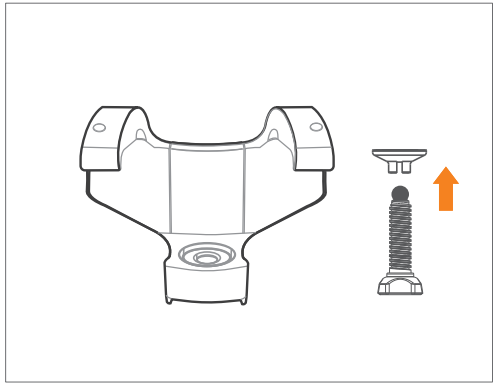

Step 1 Please take out the screw staff and U-type clamp.

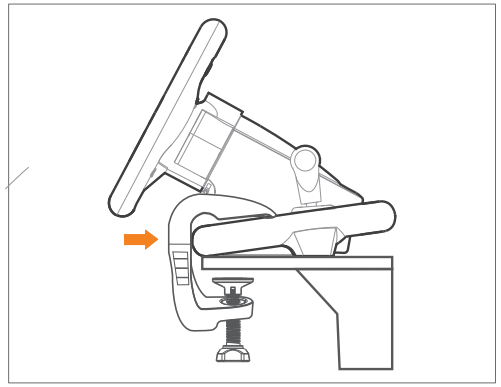

Step 3 Then clip the U-type clamp to the steering wheel, as shown above.

U-type clamp, which can be directly installed on a desk.

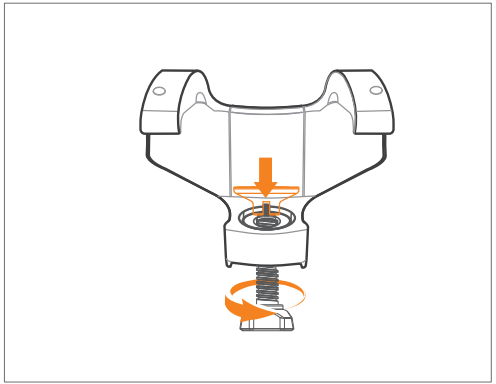

Step 2 Install screw staff into the U-type clamp.

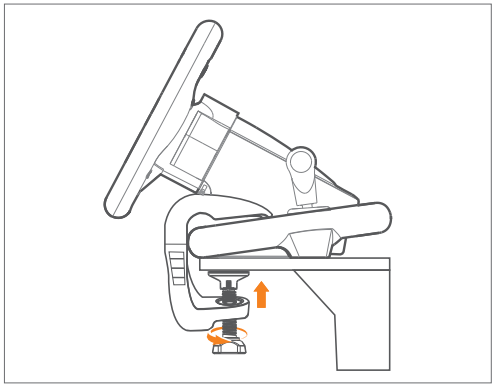

Step 4 Install the steering wheel to desk, then tighten the screw staff.

Using on PC

Step 1 **Plug the USB interface of steering wheel into computer. Mode indicator will display ON when connected successfully.**

Step 2 **The steering wheel will default to X-input mode when connected. Hold and press the HOME button to shift working mode to D-input.**

Step 3 **Easily shift to corresponding working modes when playing different games.**

Press HOME button for 3 seconds

X-input ←→ D-input

X-input Mode

X-input working mode is suitable for XBOX 360 games on PC and plug and play.
Recommended games are Need for Speed 13 (or versions above), Dirty 2/3 Ridge Racing etc.

D-input Mode

Suitable for early single-player racing games.
Recommended games are Need for Speed 1-12, Euro Truck Simulator 2 etc.

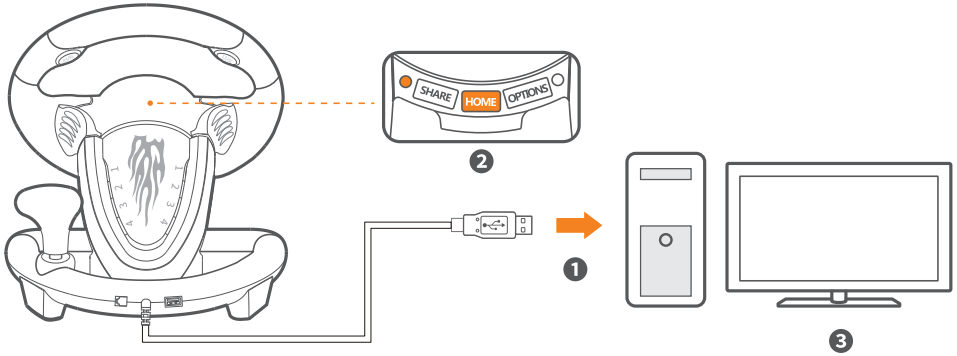

Diagram for PC Connection

Function Testing on PC

Function inspection of steering wheel is available when connected to a PC, the specific steps shown below:

Open Control Panel → Device and Printer → Right mouse click game pad icon → Game Controller Setting, click Properties Testing .

Using on PS3

Step 1 **Plug the USB interface of steering wheel into PS3 and power on PS3 console.**

Step 2 **Corresponding channel indicator displays ON when steering wheel is connected successfully with console, then launch game to play or conduct some relevant setting on console .**

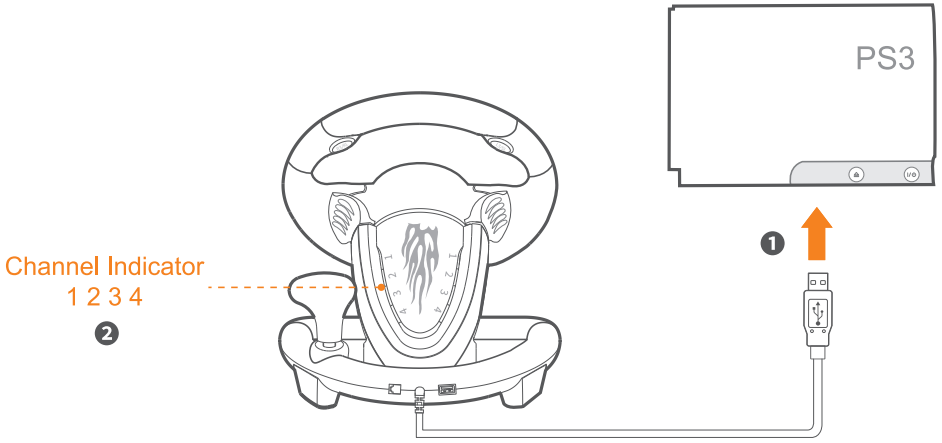

Diagram for PS3 Connection

Using on PS4

Step 1 **Power OFF the original PS4 controller.**

Step 2 **Use a Micro USB cable to connect PS4 original controller with guidance port of the steering wheel.**

Step 3 **Plug the USB interface of steering wheel into PS4.**

Step 4 **Press HOME button on steering wheel, red mode displays ON when connected successfully .**

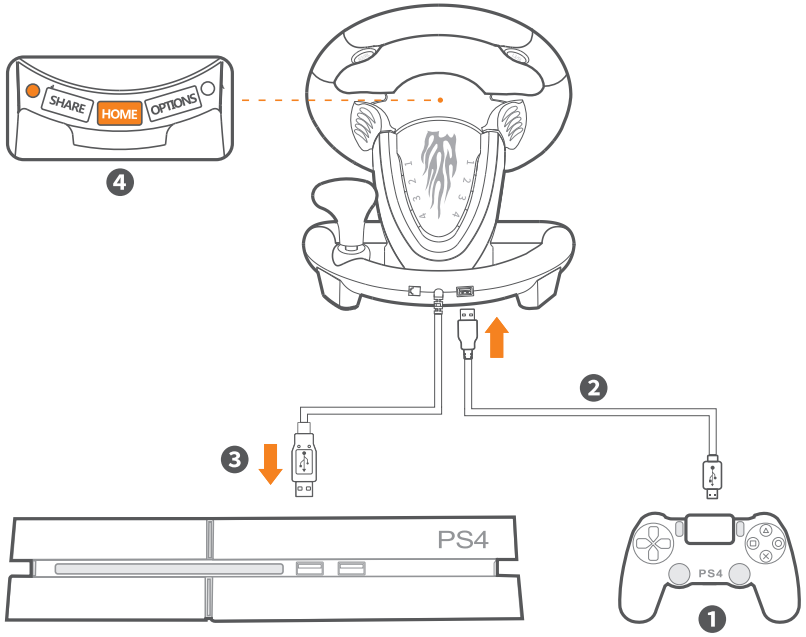

Diagram for PS4 Connection

Using on XBOX ONE/XBOX SERIES X&S

Step 1 **Power OFF the original XBOX ONE /XBOX SERIES X&S controller.**

Step 2 **Use a Micro USB cable to connect XBOX ONE /XBOX SERIES X&S original controller with guidance port of the steering wheel.**

Step 3 **Plug the USB interface of steering wheel into XBOX ONE /XBOX SERIES X&S.**

Step 4 **Press HOME button on steering wheel, red mode indicator remains ON when connected successfully.**

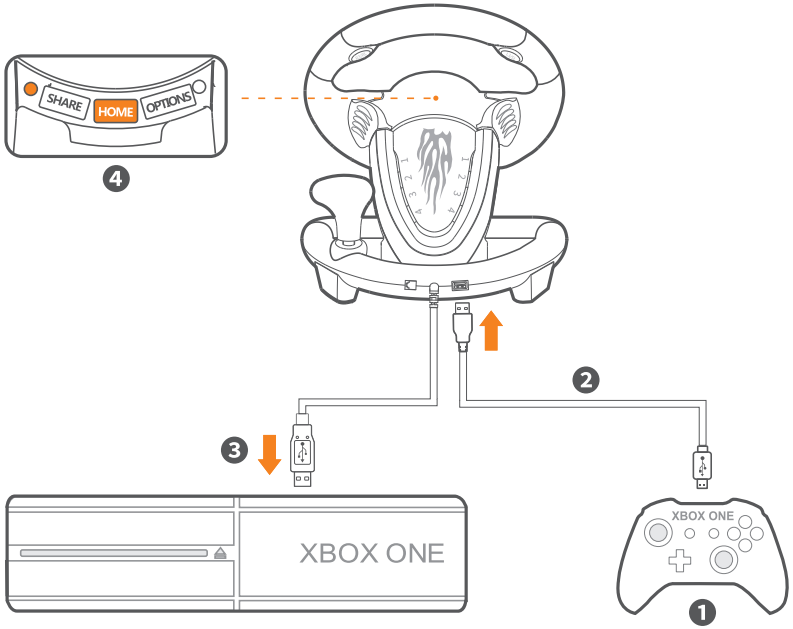

Diagram for XBOX ONE Connection

Using on SWITCH

* **Enter Homepage of SWITCH, Select ⚙ Setti**
Pro Controller Wired Connection. Please ma

Connect with SWITCH Console

Step 1 **Please connect the Type-C OTG with**
interface of steering wheel.

Step 2 **Then plug the Type-C interface to SW**

Step 3 **Red mode indicator displays ON whe**
successfully.

(Note : Type-C OTG Adapter is not included

Connect with SWITCH Dock

Step 1 **Place the SWITCH dock and ensure s**

Step 2 **Plug the USB interface of steering wh**
SWITCH console.

Step 3 **Red mode indicator displays ON whe**

ing → Controllers and Sensors → select

ke sure that the option state is ON.

the USB

ITCH console.

n connected

)

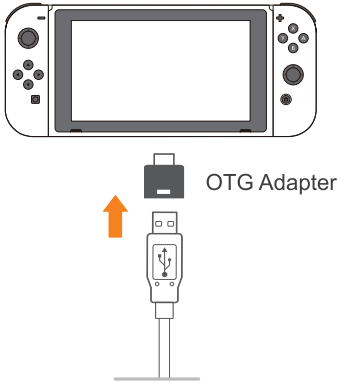

uccessful connection.

eel into SWITCH dock and power on

n connected successfully.


USB Port of SWITCH Dock

Programming Settings

* Original button function will be replaced under programming setting

Programming Buttons : L-paddle, R-paddle, L-pedal, R-pedal, L3, R3, Shifter

Programming Available Buttons : A, B, X, Y, L1, L2, R1, R2

How to program?

Step 1 **Press SHARE + OPTIONS simultaneously for 3 seconds, release buttons when green programming indicator displays ON.**

Step 2 **Press the programming button, programming indicator should flash green.**

Step 3 **Press programming available button, setting is complete when green programming indicator is OFF.**

Clear Programming Setting

Step 1 **Press SHARE + OPTIONS simultaneously for 3 seconds, release buttons when green programming indicator displays ON.**

Step 2 **Press programming button, programming indicator will flash green.**

Step 3 **Press programming button again, green programming indicator will turn OFF, function clearing complete.**

Step 4 **Replug and reconnect steering wheel, all settings will be cleared automatically.**

How to set pedals as Y axis?

Step 1 **Press SHARE + OPTIONS simultaneously for 3 seconds, green programming indicator displays ON.**

Step 2 **Press left button of D-pad, set successfully when green indicator is OFF.**

Sensitivity Adjustment

3 Levels of Sensitivity Adjustments

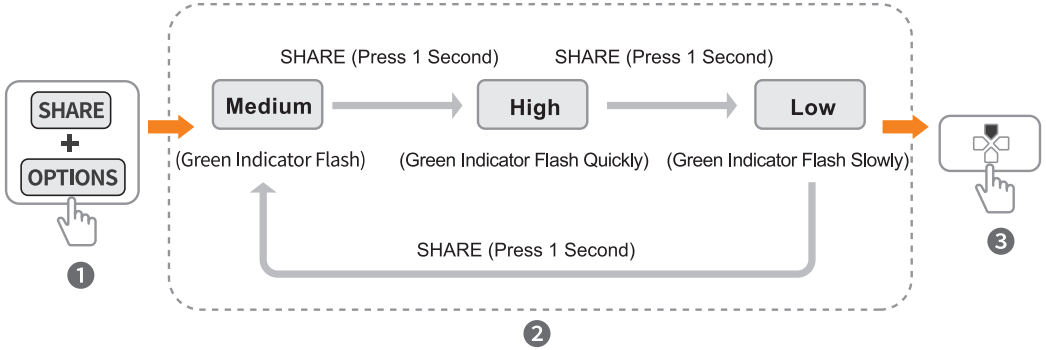

Step 1 **Press SHARE + OPTIONS for 3 seconds, green programming indicator displays ON.**

Step 2 **Adjust Sensitivity : Press SHARE button to adjust sensitivity - Medium, High, Low for choices. (Default sensitivity level is medium)**

Step 3 **Save Setting : Press D-pad UP [✚] button to save settings, programming indicator displays OFF.**

Attention

- **Avoid strong vibrations and do not disassemble, refit or repair on your own.**
- **Avoid water or other liquids on or in the steering wheel as it may affect the performance of the steering wheel.**
- **Do not store in humid and/or high temperature areas. Keep free of dust and soot.**
- **Please handle gently when connecting and removing the steering wheel.**
- **Children should be under adult ' s supervision at all times when usingthis product .**

Product Specifications

Product Model	PXN - V3 PRO
Connect Type	USB Wired
Working Power	DC 5V
Working Current	10mA - 170mA
Packaging Size	Appro. 350 * 325 * 270 mm
Product Size	Appro. 260 * 320 * 245 mm
Unit Weight	Appro. 2360 g
Usage Humidity	10 - 40 °C
Usage Temperature	20 ~ 80 %

V3 PRO

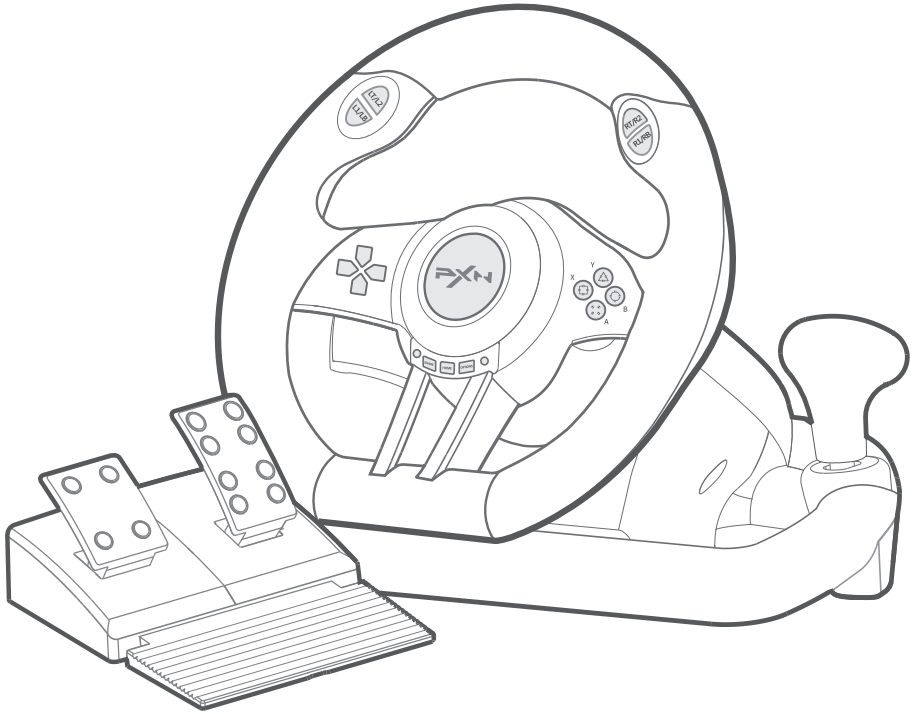

使用マニュアル

User Manual

システムの要求

支持するデバイス	PC / PS3 / PS4 / XBOX ONE / XBOX S
PCのシステム	windows 7 / 8 / 10

本体の細部介绍

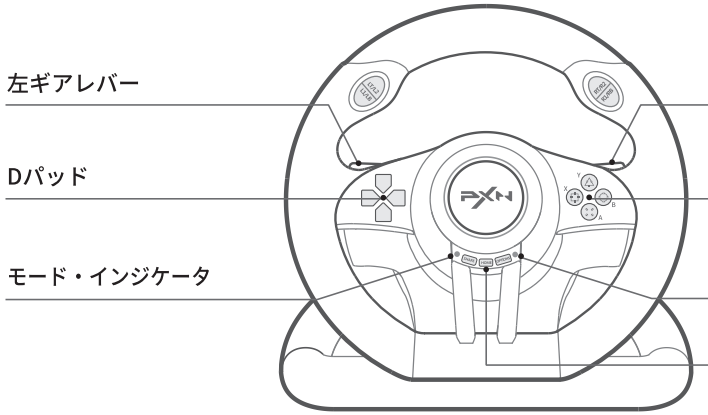



ERIES X&S / SWITCH

右ギアレバー

（ＡＢＸＹ）ボタン

プログラム・インジケータ

ホームボタン

アクセル

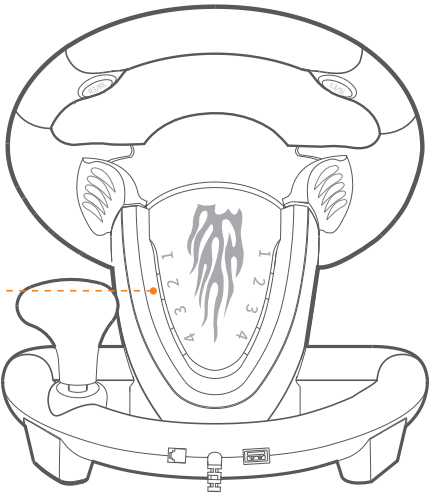

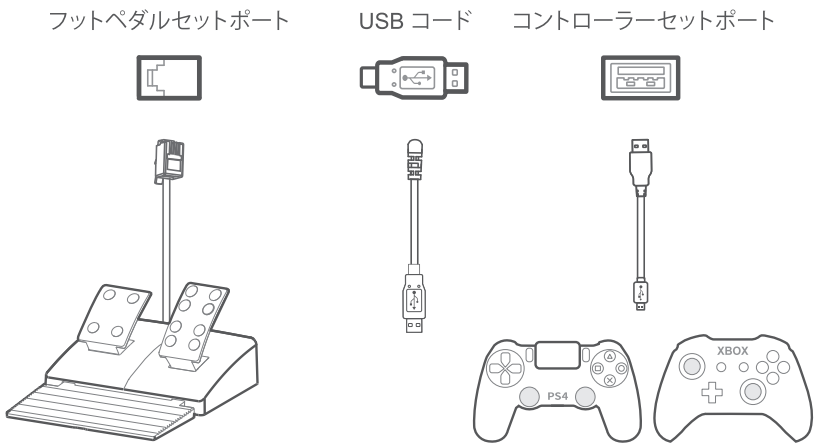

フットペダルは USB コードでハンドルコントローラーに接続します

ハンドル・コントローラーの

ハンドル・コントローラー商品セットにはスクリュ

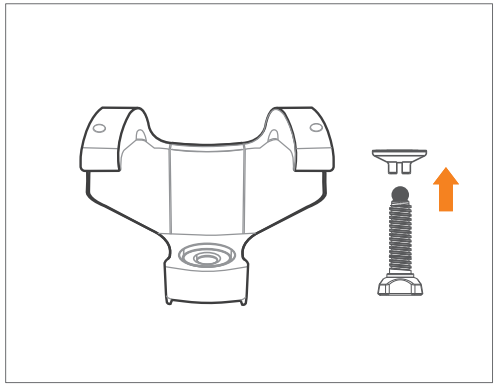

Step 1 商品からスクリュースタとU型クランプを取り出します

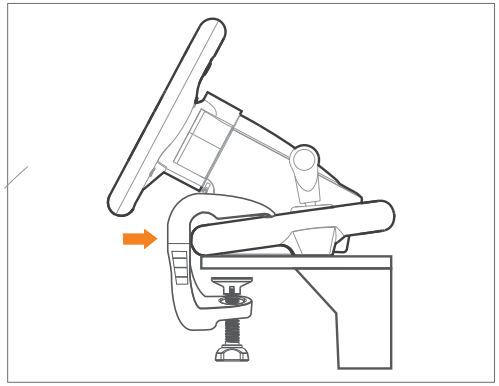

Step 3 セットしたU型クランプはハンドルコントローラーに設置します

セット順番

ースタとU型クランプがあります 。

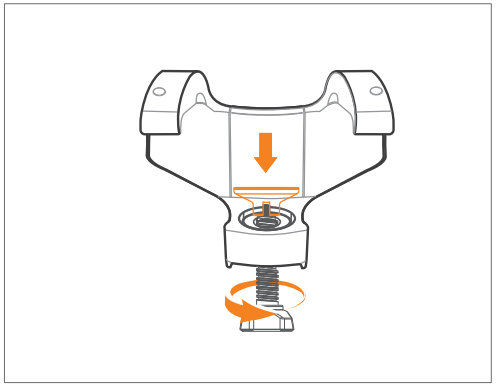

Step 2 Iスクリュースタはu型クランプにセットします

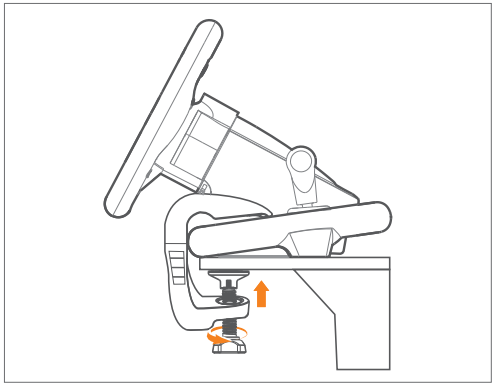

Step 4 セットが完成したら､ハンドルコントローラーをテーブルに設置させ､スクリュースタを固定させます

パソコンにセットする場合

Step 1 ハンドル・ジョイスティックの USB コードで PC にセットし 、機能ルートの赤くインジケータランプが常亮します 。

Step 2 ハンドル・ジョイスティックの機能モードは X-input モードに設置させ 、ハンドル・ジョイスティックの「 ホーム 」ボタンを3秒ほどに長押すとモードを切り替えます 。

Step 3 ゲームモードに切り替え 、ゲーム操作することができます 。

HOMEボタンを3秒ほど長押

X-input ⟷ D-input

X – input モードの場合

X - input モードは 、PC 、プラグアンドプレイの XBOX 360 ゲームに適しています 。
推薦するゲーム：《 Need for speed 13 》、《 Dust 2 / 3 》、《 リッジレーサー 》など 。

D - input モードの場合

D - input モードは 、早期のシングルプレイヤーのレースゲームに適しています 。
推薦するゲーム：《 Need for speed 1-12 》、《 EUシミュレーショントラック2 》など 。

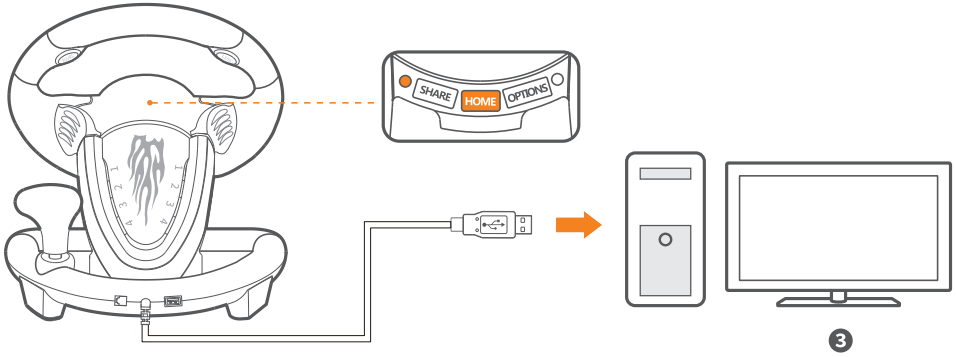

PCに接続するイメージ

ハンドル・コントローラーの機能テスト

PCパソコンで使用する際、パソコンのゲームコントロールパネルを開け、 コントローラーテスト機能起動できます、操作手順以下:
コントロールパネルを開き ⇒ デバイスとプリンタ ⇒ ゲームコントローラーを右クリック ⇒ コントローラー設置を選択し、「属性」のハンドル・ジョイスティックテスト機能を起動させます。

PS3 にセットする場合

Step 1 **ステアリング･コントローラーの USB コードは PS3 の USB ポートに接続します。**

Step 2 **接続セットが完成したら、チャンネルルートから、1つの機能チャンネルルートをステアリング・コントローラーに分配されます。チャンネル・インジケータの1つ来イプが常亮になります。ステアリング・コントローラーはこの時、ゲームをすることができ、機能設置することができます。**

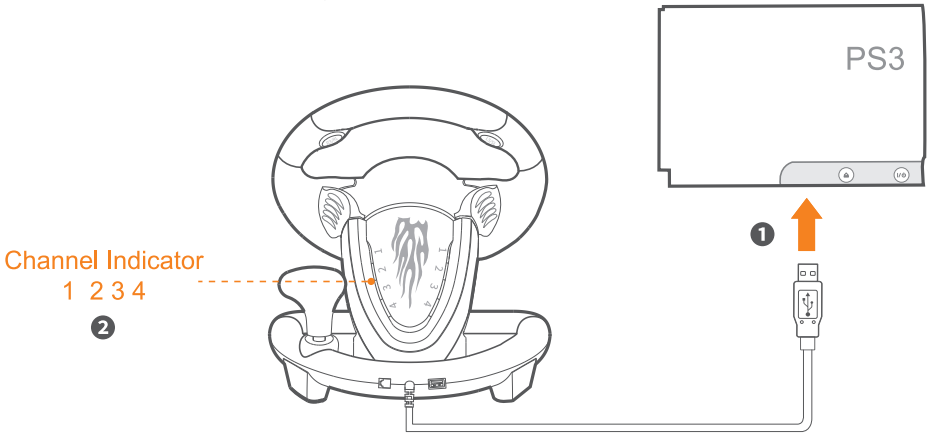

PS3 に接続するイメージ

PS4 にセットする場合

Step 1 **PS4 本体の電源が ON にします。**

Step 2 **ステアリング・コントローラーは USB コードで PS4 本体に接続させます。（テアリング・コントローラーの電源インジケータが点滅します）**

Step 3 **フットペダルのLANはステアリング・コントローラーに接続します。**

Step 4 **PS4 の正規品コントローラーの電源が OFF にさせます。データコードでステア**
コントローラーに接続させます。（本体コントローラーのインジケータが常亮に

Step 5 **「HOME」ボタンを押せば 、ステアリング・コントローラーから 、ゲームを起動**
とができるようになります。

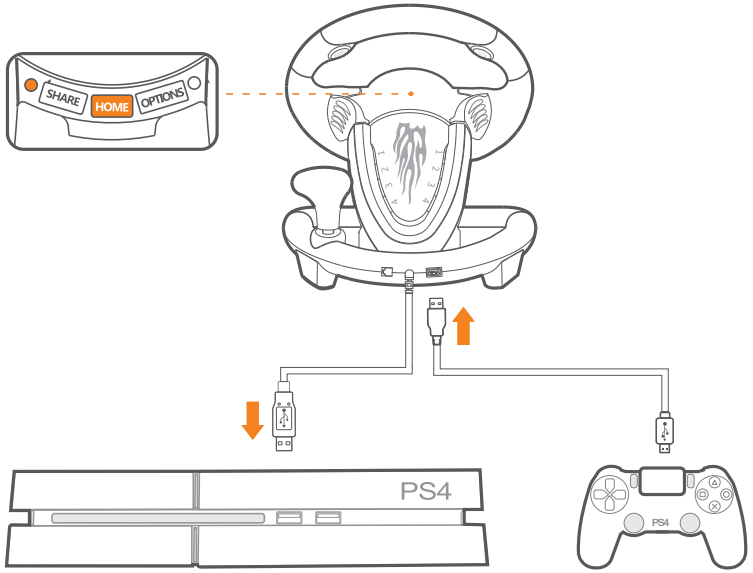

PS4 に接続するイメージ

リング・
なります）
するこ

XBOX ONE/XBOX SERIES X&Sにセットして使用する場合

Step 1　**XBOX ONE /XBOX SERIES X&S本体の電源が ON にします。**

Step 2　**ステアリング・コントローラー本体の USB ポートは XBOX ONE /XBOX SERIES X&S にセットさせます。(XBOX ONE /XBOX SERIES X&Sの電源インジケータを点滅になり、表示します)**

Step 3　**フットペダルのLANポートがテアリング・コントローラーに接続します。**

Step 4　**XBOX ONE /XBOX SERIES X&Sのコントローラー電源を OFF させます。**

Step 5　**「HOME」ボタンを押せば、ステアリング・コントローラーから、ゲームを起動することができるようになります。**

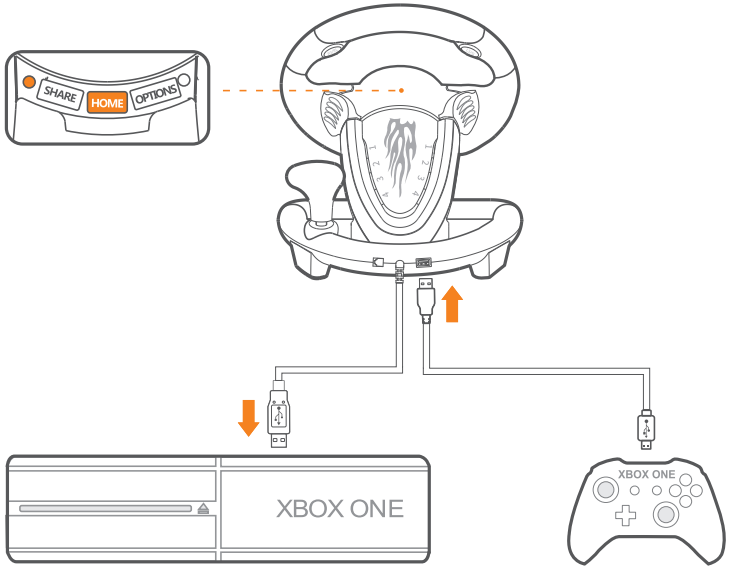

XBOX ONE に接続するイメージ

Switch本体にセットして使用する場合

* Switch のメイン画面から、「⚙」⇒「コントローラー&センサー
コード接続」、順番にタップします。Switch 本体は電源が ON の

Switch本体にセットして使用する場合

Step 1　**OTG の変換ヘッドをハンドルコントローラーの USB ケーブルにセットします。**

Step 2　**OTG をセットした Type-C コードは Switch の本体にスタンバイします。**

Step 3　**接続が完成したら、ハンドル・ジョイスティックのモードインジケータの赤いランプが常亮します。**

(* OTG 変換ヘッドは別に購入する必要です)

Switchのペースにセットする方法

Step 1　**Switch 本体は機器のベースにセット、接続成功した状態を確認**

Step 2　**ハンドルコントローラーの USB コードは Switch ベースの USB**
がONさせます。

Step 3　**接続が完成したら、ハンドル・ジョイスティックのモードインジケ**



Switchベー

ー」⇒「Proコントローラーの
状態であることを確保します。

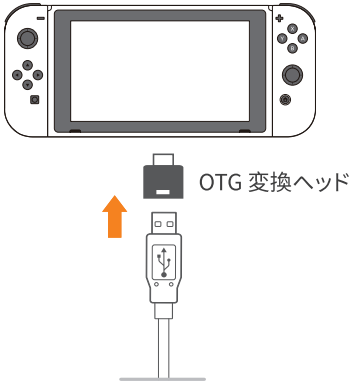

。
ポートに接続し、Switch の電源

ータの赤いランプが常亮します。



スのUSBポート

ボタンのプログラミング設置

※ 注意：プログラミングを設置するとボタンの元機能をクリアされます

設置できるボタン：左ギアレバー、右ギアレバー、右フットペダル、左フットペダル、L3、R3、シフトレバー

機能コピーできるボタン：A、B、X、Y、L1、L2、R1、R2

プログラミング機能の設置

Step 1 **ハンドル・コントローラー本体の SHARE ボタンと OPTIONS ボタンを同時に押します。3秒後、ボタンがプログラミング設置機能モードに入ります。インジケータの緑ランプが常亮になり ⇒ ボタンを放す。**
Step 2 **プログラミングをコピーする目標ボタンを押します⇒インジケータの緑ランプが点滅します。**
Step 3 **機能をコピーしたいボタンを押すとインジケータが消え ⇒ 設置が完成します。**

設置したプログラミングの機能クリア方法

Step 1 **ハンドル・コントローラー本体の SHARE ボタンと OPTIONS ボタンを同時に押します。3秒後にプログラミングの設置モードに入ります。インジケータ・ランプの緑ランプが常亮になり ⇒ ボタンを放す。**
Step 2 **プログラミングを設置したボタンを押します ⇒ インジケータの緑ランプが点滅します。**
Step 3 **もう一回プログラミング設置したボタンを押します ⇒ インジケータの緑ランプが消え、プログラミングの設置をクリアが完成します。**
Step 4 **ハンドル・コントローラーを再度接続すれば、設置した機能は全てにクリアとなります。**

フットペダルをY軸に設置する方法

Step 1 **ハンドル・コントローラー本体の SHARE ボタンと OPTIONS ボタンを同時に押します ⇒ 3秒後プログラミング設置するランプの緑インジケータが常亮になります。**
Step 2 **Dパッドを押します。インジケータの緑ランプが消え、設置が成功します。**

ハンドル・

ハンドル ・コント



Step 1 **設置状態：**
が点灯しま
Step 2 **操作敏感精**
できます。(
Step 3 **設置を保存**
消えます。

注意事項

・ハンドル・コントロ
分が解体をしたり、
・コントローラー本体

コントローラーの感度精度の調整

ローラーの感度3レベルの設置

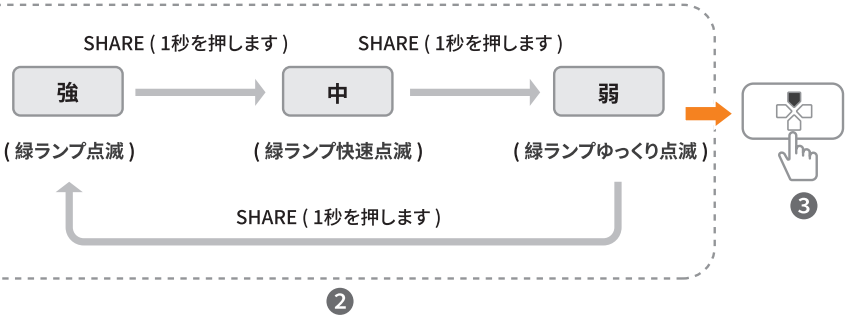

SHARE ボタンと OPTIONS ボタンを同時に押します⇒3秒後 、インジケータの緑ランプ

す ⇒ ボタンを放します 。

度の調整：SHARE ボタンを押せ ⇒ ハンドル・コントローラーの操作敏感精度を調整

（ 出荷状態では中レベルです ）

：Dパッドの「 ✜ 」ボタンを押す ⇒ 設定を保存されます 。緑のインジケータランプが

ーラー本体は強烈な振動することをお避けるようにしてください 。また 、本体はご自

修理したりすることもしないようにしてください 。

には水&液体などの物が入らないようにしてください 、損壊の原因になりますから 。

- コントローラー本体を保存する時 、湿度が高い 、温度が高い 、油煙が多いの所に管理することをお控えてください 。
- コントローラー本体を使用する際 、暴力の扱いや乱暴な使用などしないようにしてください 。必ず 、丁寧に扱うこと 。
- 未成年&幼い子供などに遊ばれる時 、大人の人の監視している所に与えるようにしてください 。

製品規格

製品型番	PXN-V3 PRO
接続方式	USBコード
額定電流	DC 5V
稼働電流	常時には10mAより小さい 、振動状態では170mAより小さいです
包装サイズ	約 350 * 325 * 270 mm
製品サイズ	約 260 * 320 * 245 mm
本体重さ	約 2360 g
使用温度	10 - 40 ℃
使用湿度	20 ~ 80 %